



Procedure of Firmware update

- 1 Save Firmware of APS7000(gw.sbt) into GW folder where build in root directory of USB.
(USB:\GW\gw.sbt)
- 2 Plug USB which included firmware of APS-7000 into the front socket.
- 3 After USB device has detected and display as below

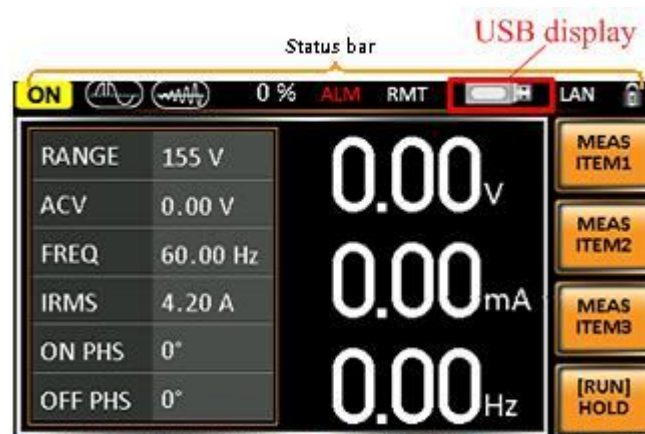

- 4 Press "Menu" and adjust knob to item1. System Information.
Record and check version of firmware.
- 5 Adjust knob to item 11. Special Function, and then press "Enter"
- 6 Key-in password "xxxx"(5004) , and then press "Enter"
- 7 Adjust knob to item1.Update Main Program, and then press "Enter" to update firmware.
- 8 Update screen as below

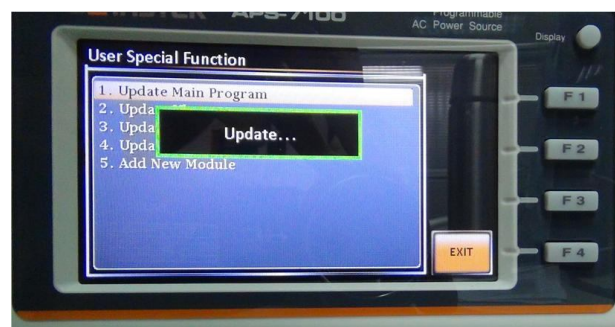

- 9 After firmware is updated, APS-7000 will restart.
- 10 Press "Menu" to check version if the firmware is refreshed.