


Handheld Digital Storage Oscilloscope with DMM

GDS-200 & GDS-300 Series

QUICK START GUIDE

GW INSTRUMENT PART NO. 82DS-22000MH1



SAFETY INSTRUCTIONS

This section contains the basic safety symbols that may appear on the accompanying User Manual CD or on the instrument. For detailed safety instructions and precautions, please see the Safety Instructions chapter in the user manual CD.

Safety Symbols

These safety symbols may appear in the user manual or on the instrument.

- Warning: Identifies conditions or practices that could result in injury or loss of life.
- Caution: Identifies conditions or practices that could result in damage to the instrument or to other properties.
- DANGER High Voltage
- Attention Refer to the Manual
- Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.
- The internal battery is not user-replaceable. Please return the unit back to your local dealer for assistance. For battery details, see the user manual.

Power Cord for the United Kingdom

When using the instrument in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons.

WARNING: THIS APPLIANCE MUST BE EARTHED
IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow: Earth
Blue: Neutral
Brown: Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:
The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol ⊕ or coloured Green/Green & Yellow.
The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.
The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.
If in doubt, consult the instructions provided with the equipment or contact the supplier.
This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.
Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

GETTING STARTED

The Getting started chapter introduces the series lineup, main features, appearance, and set up procedure.

Series Lineup

There are 6 models in the series, divided by DSO bandwidth, DSO memory depth and DMM digit resolution.

Model Name	Bandwidth	Memory Depth	DMM Resolution	Temp. Meas.
GDS-207	70MHz	1M		
GDS-210	100MHz	points per channel	3½	No
GDS-220	200MHz			
GDS-307	70MHz	5M		
GDS-310	100MHz	points per channel	4½	Yes
GDS-320	200MHz			

- Performance
- 1 G Sa/s sampling rate max
 - 70/100/200MHz bandwidth
 - Acquisition memory: 1Mpts (GDS-200), 5Mpts (GDS-300)
 - Max 300Vrms(CAT II, DSO); 600V(CAT II) or 300V(CAT III) for DMM
 - 30,000 waveforms can be replayed

- Features
- Simultaneous DMM and DSO operation
 - Portrait and landscape modes
 - Large 800 x 480 TFT panel and capacitive touch panel
 - 7.4V/6100mAH battery for up to 4 hours operation
 - Support for differential probes
 - Handy APPs - EE calculator, chip resistance calculator, attenuation calculator
 - Shielded BNC terminals
 - DSO Features
 - X-Y mode
 - Go/No Go
 - 36 automatic measurement functions
 - Trend plot
 - Edge, Alt, Video and Pulse trigger functions
 - FFT, FFTrms, +, -, /, * math functions
 - Replay function
 - DMM Features
 - 50,000 counts
 - DCV, DCA, ACV, ACA, R, Diode, Continuity, Temperature
 - Fuse protection for the current ports
- Interface
- Mini-B USB device port

GDS-200/GDS-300 Product Packing List

No	Part	Description	Qty
1	GDS-200/ GDS-300	2 channels · Digital Oscilloscope	1
2	Probe	Switchable Passive Probe (10:1/1:1)	2
3	Test Lead	GTL-207A	1
4	GAP-001	Adaptor (Wall type, AC to DC)	1
5	GSC-010	Soft Carry	1
6	GSC-011	Soft Protect Bag	1
7	GWS-001	Wrist Strap	1
8	User Manual	CD User Manual	1
9	Quick Guide	Quick Start Guide	1

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will Corporation.

The information in this manual was correct at the time of printing. However, Good Will continues to improve its products and therefore reserves the right to change the specifications, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd. No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.


Package Contents and Accessories

Standard Accessories	
Item	Part Number
User Manual CD	
Quick Start Guide (this document)	
150MHz passive probe; for GDS-207 /307, GDS-210 /310	GTP-150B-2
250MHz passive probe; for GDS-220 /320	GTP-250B-2
Multimeter test lead x1	GTL-207A
Soft carrying case (large)	GSC-010
Protection bag (small)	GSC-011
Wrist strap	GWS-001

Optional Accessories	
Item	Part Number
Dual-channel differential probe, Only for GDS-200/300	GDP-040D
Type A - Mini-B USB cable	GTL-253
Vertical calibration cable	GCL-001
Protective film for LCD screen	GPF-700


Download	
Item	Part Number
USB driver	dso_vpo.inf

Panel Overview

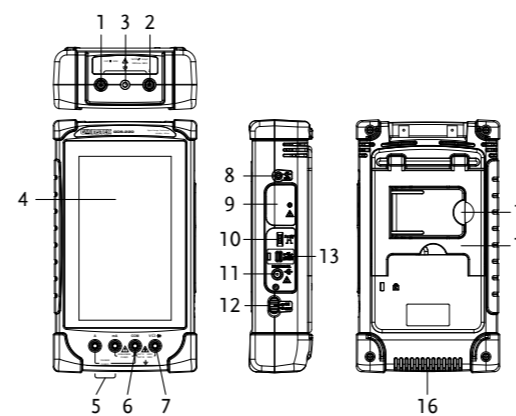

- | Description | |
|---------------------------------------|---|
| 1. Channel 1 BNC input | 2. Channel 2 BNC input |
| 3. Tapped hole for options | 4. 800 x 480 TFT screen, cap. touch panel |
| 5. A and mA range DMM ports | 6. Com port |
| 7. Voltage, resistance and diode port | 8. External power port for optional extras |
| 9. Internal Use Port. Restricted use | 10. Calibration port: 2Vpp, 1kHz, square wave |
| 11. 12V DC input | 12. Power switch |
| 13. Mini-B USB device port | 14. Horizontal stand port |
| 15. Vertical stand | |

Display Overview

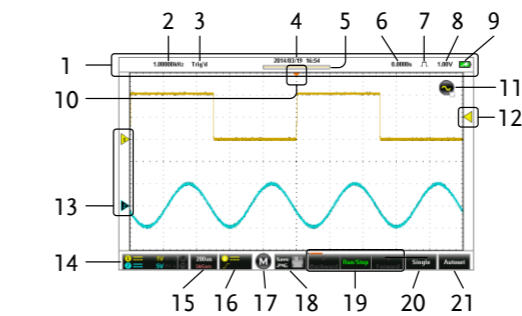

Note: Background color has been inverted for clarity.

- | Description | |
|--------------------------|-----------------------------------|
| 1. Drop down menu | 2. Trigger frequency |
| 3. Trigger status | 4. Date and Time |
| 5. Memory bar | 6. Horizontal position |
| 7. Acquisition mode | 8. Trigger level |
| 9. Battery Indicator | 10. Horizontal position indicator |
| 11. Gesture control icon | 12. Trigger level indicator |
| 13. Channel indicators | 14. Vertical scale |
| 15. Horizontal scale | 16. Trigger mode |
| 17. Measurement/DMM key | 18. Hardcopy key |
| 19. Run Mode keys | 20. Single trigger |
| 21. Autoset | |


Setting up the Oscilloscope

This section describes how to set up the oscilloscope properly including setting the stand, power up and basic touch gestures.

Power Up

Before the unit is powered up for the first time, it is recommended that the unit is first fully charged.

1. Plug the AC-DC power pack into the mains outlet.
2. Connect the 12V plug into the 12V socket on the interface panel. The unit will begin charging. An orange battery indicator light indicates charging, while green indicates charged.
3. Slide the power switch to the ON position, located on the interface panel.
4. The unit will turn on in a short while.

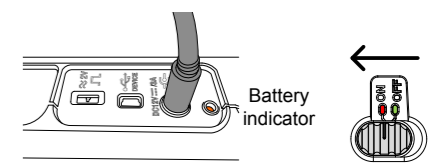


5. The battery indicator is shown on the top right-hand corner of the main display.




Tilting the Stand


The GDS-200/300 has two adjustable tabs on the rear panel that can be used to position the instrument into two preset orientations.

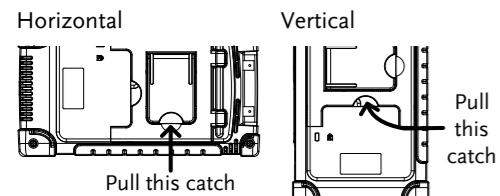


Portrait and Landscape Mode

1. Tap the top of the screen to access the Menu tray.
2. Press the  icon to toggle between horizontal and vertical view.

Default Settings

1. Tap the top of the screen to access the Menu tray.
2. Press the  icon to load the default settings.

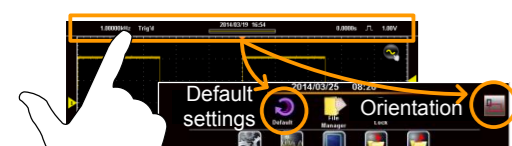


Basic Operation

This section will go over all of the basic touch gestures that are available using the default settings. Please see the user manual for comprehensive explanations.

Channel/Ref/Math Waveform Selection

To select the active waveform, tap the desired channel, math or reference indicator.


When selected, the icon will become a solid triangle.

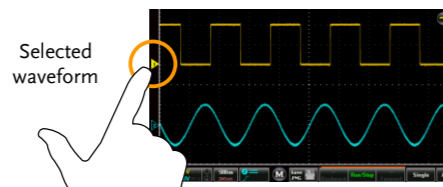

Vertical Position of Selected Waveform


Swipe the screen vertically to set the vertical position of the selected waveform.

Tapping the upper or lower part of the screen will also increase/decrease the vertical position.

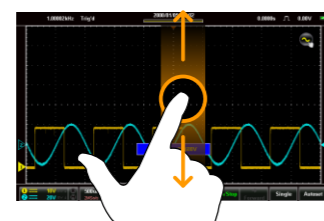

Vertical Scale


Pinch in/out vertically to set the vertical scale of the selected waveform.

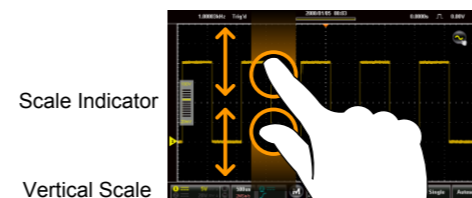

Horizontal Position and Scale

Swipe the screen horizontally to set the horizontal position of the displayed waveforms.


Pinch in/out horizontally to set the horizontal scale of the display.

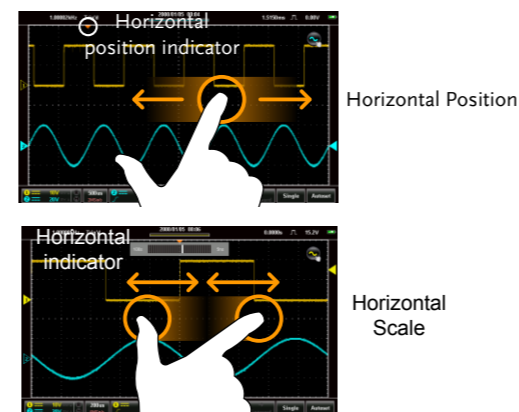

Trigger Source and Trigger Level

Tap on the trigger level indicator to toggle between trigger sources.

Swipe the screen to the right of the grid to set the trigger level with the currently selected source.

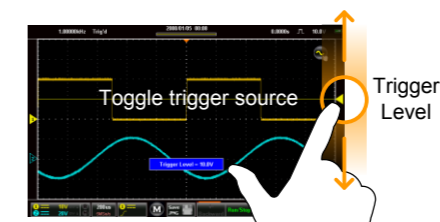

Drop Down Menu

The Drop Down menu contains the Menu tray and the App tray. The Menu tray includes the Horizontal/Vertical orientation key, Default settings, Utility menu, Display and Acquisition, Automatic measurement menu, Go-NoGo, Save, Recall, Panel Lock and File utilities.

Tap Drop Down menu area to access the Menu or App tray



Trigger

Source	Ch1 or Ch2
Trigger Mode	Auto, Normal, Single, Force
Trigger Type	Edge, Pulse width, Video, Alternative
Trigger Holdoff	10ns - 10s
Coupling	AC, DC, LFR, HFR, NR
Sensitivity	DC - 25MHz: approx. 0.5div or 5mV 25MHz - 70/100/200MHz: approx. 1.5div or 15mV

Horizontal

Range	5ns-100s/Div (1-2-5 increments)
Roll	100ms/div - 100s/div
Pre-Trigger	10 div max.
Post-Trigger	1,000 div max (depend on time base)
Accuracy	±20ppm over any > 1ms time interval

X-Y Mode

Phase Shift	±3° at 100kHz
-------------	---------------

Cursors and Measurement

Cursors	Voltage difference between cursors(Δ V), time difference between cursors(Δ T), frequency measure(1/Δ T)
Auto-measurement	36 sets
Auto-counter	6 digits. Range: 2Hz to rated bandwidth
Autoset	Available

Probe Compensation

	2V, 1kHz, 50% Duty cycle
--	--------------------------

Miscellaneous

Multi-language Menu	Available
On-line Help	Available
Time and Clock	Available

Battery

Battery Power	Li-polymer 6100mA/hr, 7.4V (Built-in)
Charge Time	2.0 hour (75%)
Operation Time	4.1 hours, depending on the operating conditions.

Interface

USB	USB Device (Isolated)
Internal Flash Disk	120MB

Display

Type	7 Inch
Display Resolution	480 x 800
Display Orientation	Landscape and Portrait
Backlight Control	Manual adjustable & ECO mode
Touch Panel	Capacitive

Power Adapter

Line Voltage	AC 100V-240V, 47-63Hz, Power Consumption 40W
DC Output	12V/3A, double shielded wire cable

Dimensions and Weight

Weight	1.5kg
Dimensions	HxWxD(mm) 240.2mm x 136.0mm x 59.7 mm

DMM Specifications

Basic

Reading	50,000 counts, 4½ digits (GDS-307/310/320) 3½ digits (GDS-207/210/220)
Voltage Input	CAT II 600VRMS, CAT III 300VRMS

Below are the basic conditions required to operate the DMM within specifications:

- * Calibration: Yearly.
- * Operating Temperature Specification: 18~28°C (64.4~82.4°F).
- * Relative humidity: 80%. (Non condensing)
- * Accuracy: ± (% of Reading + Digits).
- * AC measurement are based on a 50% duty cycle.

DC Voltage*

Range	50mV, 500mV, 5V, 50V, 500V, 1000V, 6 ranges
Accuracy	GDS-307/310/320: 50mV, 500mV, 5V, 50V, 500V: ±(0.05% + 5 digits); 1000V ±(0.1% + 5 digits) GDS-207/210/220: 50mV, 500mV, 5V, 50V, 500V, 1000V: ±(0.1% + 5 digits)
Input Impedance	10MΩ

* Measure range: > 50 μV

DC Current

Range	50mA, 500mA, 10A, 3 ranges
Accuracy	GDS-307/310/320: 50mA, 500mA: ±(0.1% + 0.05 mA); 10A ±(0.5% + 50mA) GDS-207/210/220: 50mA, 500mA: ±(0.5% + 0.05 mA); 10A ±(0.5% + 50mA)

AC Voltage

Range	50mV, 500mV, 5V, 50V, 700V 5 ranges
Accuracy	50mV, 500mV, 5V, 50V, 700V: ±(1.5% + 15 digits) at 50Hz-1kHz * Amplitude greater than 0.2% of the full scale reading.

AC Current*

Range	50mA, 500mA, 10A 3 ranges
Accuracy	50mA, 500mA: ±(1.5% + 0.05 mA) at 50Hz-1kHz; 10A ±(3% + 50mA) at 50Hz - 1kHz

* Measure range: >10mA

Resistance*

Range	500Ω, 5kΩ, 50kΩ, 500kΩ, 5MΩ, 5 range
Accuracy	500Ω, 5kΩ, 50kΩ, 500kΩ: ±(0.3% + 3 digits); 5MΩ ± (0.5% + 5 digits)

* Measure range: 50Ω to 5MΩ

Diode Test

	Maximum forward voltage 1.5V, Open voltage 2.8V
--	---

Temperature (Thermocouple)*

Range	-50°C - + 1000°C
Resolution	0.1°C
Thermocouple	B, E, J, K, N, R, S, T

* Specifications do not include probe accuracy. Temperature specifications only apply to the GDS-307/310/320.

Continuity Beeper

	< 15 Ω
--	--------

Diode Test

Functions	Auto Range, Max, Min, Hold, Trend plot
-----------	--

SPECIFICATIONS

The specifications apply when the oscilloscope is powered on for at least 30 minutes under +20°C-+30°C.

Scope Specifications

Vertical	
Channel	2 (BNC-Shield)
Input Impedance	1MΩ
Maximum Input	CATII 300VRMS
Input Coupling	AC, DC, GND
Bandwidth	DC-70/100/200MHz (-3dB)
Rise Time	<5ns / 3.5ns / 1.75ns approx.
Sensitivity	2mV/div-10V/div (1-2-5 increments)
Accuracy	±(3% x Readout + 0.1 div + 1mV)
Bandwidth Limit	20MHz(-3dB)
Polarity	Normal, Invert
Offset Position Range	2mV/div-50mV/div : ±0.4V 100mV/div-500mV/div : ±4V 1V/div-5V/div : ±40V 10V/div : ±300V

Signal Acquisition

Realtime Sample Rate	1GSa/s
Memory Depth	5M points per channel (GDS-307/310/320) 1M points per channel (GDS-207/210/220)
Acquisition Mode	Average: 2-256 waveforms Peak detect: 10ns sin(x)/x or ET
Replay wfms.	30,000 wfms

EC Declaration of Conformity

We **GOOD WILL INSTRUMENT CO., LTD.** declares that the below mentioned product **Handheld Digital Storage Oscilloscope and Digital Multimeter GDS-320 / GDS-310 / GDS-307 / GDS-220 / GDS-210 / GDS-207** are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to the EMC: 2014/30/EU, LVD: 2014/35/EU, WEEE: 2012/19/EU and RoHS: 2011/65/EU.

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

© EMC	
EN 61326-1 : EN 61326-2-1:	Electrical equipment for measurement, control and laboratory use — EMC requirements (2013)
Conducted and Radiated Emissions EN 55011:2016	Electrical Fast Transients EN 61000-4-4: 2012
Current Harmonic EN 61000-3-2:2014	Surge Immunity EN 61000-4-5: 2014
Voltage Fluctuation EN 61000-3-3: 2013	Conducted Susceptibility EN 61000-4-6: 2014
Electrostatic Discharge EN 61000-4-2: 2009	Power Frequency Magnetic Field EN 61000-4-8: 2010
Radiated Immunity EN 61000-4-3: 2006+A1:2008+A2:2010	Voltage Dips/ Interrupts EN 61000-4-11: 2004
© Safety	
Low Voltage Equipment Directive 2014/35/EU	
Safety Requirements EN 61010-1: 2010 (Third Edition) EN 61010-2-030 : 2010 (First Edition)	EN 61010-2-033 : 2012 (First Edition)

GOODWILL INSTRUMENT CO., LTD.
No. 7-1, Jhongsing Road, Tucheng District, New Taipei City 236, Taiwan
Tel: +886-2-2268-0389 Fax: +886-2-2268-0639
Web: <http://www.gwinstek.com> Email: marketing@goodwill.com.tw

GOODWILL INSTRUMENT (SUZHOU) CO., LTD.
No. 521, Zhujiang Road, Snd, Suzhou Jiansu 215011, China
Tel: +86-512-6661-7177 Fax: +86-512-6661-7277
Web: <http://www.instek.com.cn> Email: marketing@instek.com.cn

GOODWILL INSTRUMENT EURO B.V.
De Run 5427A, 5504DG Veldhoven, The Netherlands
Tel: +31-(0)40-2557990 Fax: +31-(0)40-2541194
Email: sales@gw-instek.eu